

Status

انقر هنا  
Quick  
Start

Interface  
Setup

Advanced  
Setup

Access  
Management

Maintenance

Status

Help

Device Info

System Log

Statistics

Device Information

Firmware Version : 2.9.5.0(RUE.C2)3.5.18.9

MAC Address : 00:11:00:11:00:aa

LAN

IP Address : 192.168.2.1

Subnet Mask : 255.255.255.0

DHCP Server : Disabled

WAN

Virtual Circuit : PVC0

Status : Not Connected

Connection Type : PPPoE

IP Address : 0.0.0.0

Subnet Mask : 255.255.255.0

Default Gateway : 0.0.0.0

DNS Server : 82.137.208.1

NAT : Disable

NEXT

ADSL

ADSL Firmware Version : FwVer:3.5.18.9\_A\_TC3085 HwVer:T14.F7\_3.0

Line State : up

Quick  
Start

Quick  
Start

Interface  
Setup

Advanced  
Setup

Access  
Management

Maintenance

Status

Help

Quick Start

This ADSL Router is ideal for home networking and small business networking. The 'Quick Start' wizard will guide you to configure the ADSL router to connect to your ISP (Internet Service Provider). The router's easy Quick Start will allow you to have Internet access within minutes. Please follow the 'Quick Start' wizard step by step to configure the ADSL Router.

NEXT

RUN WIZARD



### Quick Start

The Wizard will guide you through these four quick steps. Begin by clicking on NEXT.

- Step 1. Set your new password
- Step 2. Choose your time zone
- Step 3. Set your Internet connection
- Step 4. Re-start your ADSL router

NEXT EXIT

ADSL Router is ideal for home networking and small business networking. The 'Quick Start' wizard will guide you to configure the ADSL router to connect to ISP (Internet Service Provider). The router's easy Quick Start will allow you to get Internet access within minutes. Please follow the 'Quick Start' wizard step by step to configure the ADSL Router.

NEXT

RUN WIZARD



## Quick Start - Password

You may change the **admin** account password by entering in a new password. Click **NEXT** to continue.

New Password :  كلمة السر الخاصة بالمستخدم admin

Confirmed Password :  تأكيد كلمة السر الخاصة بالمستخدم admin

[BACK](#)[NEXT](#)[EXIT](#)

DSL Router is ideal for home networking and small business networking. The 'Quick Start' wizard will guide you to configure the ADSL router to connect to ISP (Internet Service Provider). The router's easy Quick Start will allow you to get Internet access within minutes. Please follow the 'Quick Start' wizard step by step to configure the ADSL Router.

[NEXT](#)[RUN WIZARD](#)

## Quick Start - Time Zone تحديد النطاق الزمني

Select the appropriate time zone for your location and click NEXT to continue.

(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London

BACK

NEXT

EXIT

ADSL Router is ideal for home networking and small business networking. The 'Quick Start' wizard will guide you to configure the ADSL router to connect to your ISP (Internet Service Provider). The router's easy Quick Start will allow you to get Internet access within minutes. Please follow the 'Quick Start' wizard step by step to configure the ADSL Router.

NEXT

RUN WIZARD



## Quick Start - ISP Connection Type

Select the Internet connection type to connect to your ISP. Click NEXT to continue.

- Dynamic IP Address Choose this option to obtain a IP address automatically from your ISP.
- Static IP Address Choose this option to set static IP information provided to you by your ISP.
- PPPoE/PPPoA عليك تحديد هذا الخيار لنوع الاتصال مع المزود
- Bridge Mode Choose this option if your ISP uses Bridge Mode.

BACK

NEXT

EXIT

DSL Router is ideal for home networking and small business networking. 'Quick Start' wizard will guide you to configure the ADSL router to connect to ISP (Internet Service Provider). The router's easy Quick Start will allow you to get Internet access within minutes. Please follow the 'Quick Start' wizard step by step to configure the ADSL Router.

NEXT

RUN WIZARD

## Quick Start - PPPoE/PPPoA

Enter the PPPoE/PPPoA information provided to you by your ISP. Click NEXT to continue.

Username:

Password:

VPI:  عليك ادخال قيمة 8 هنا (0~255)

VCI:  عليك ادخال قيمة 35 هنا (1~85535)

Connection Type:  عليك اختيار هذا النوع PPPoE LLC

[BACK](#)[NEXT](#)[EXIT](#)

DSL Router is ideal for home networking and small business networking. The 'Quick Start' wizard will guide you to configure the ADSL router to connect to your ISP (Internet Service Provider). The router's easy Quick Start will allow you to get Internet access within minutes. Please follow the 'Quick Start' wizard step by step to configure the ADSL Router.

[NEXT](#)[RUN WIZARD](#)



# Micronet<sup>®</sup>

Faster and Easier Networks

## Quick Start Complete !!

The Setup Wizard has completed. Click on **BACK** to modify changes or mistakes. Click **NEXT** to save the current settings.

[BACK](#)[NEXT](#)[EXIT](#)

finish

[Interface Setup](#)[Advanced Setup](#)[Access Management](#)[Maintenance](#)[Status](#)[Help](#)

DSL Router is ideal for home networking and small business networking. The 'Quick Start' wizard will guide you to configure the ADSL router to connect to your ISP (Internet Service Provider). The router's easy Quick Start will allow you to get Internet access within minutes. Please follow the 'Quick Start' wizard step by step to configure the ADSL Router.

[NEXT](#)[RUN WIZARD](#)



## Quick Start Completed !!

Saved Changes.

CLOSE

Interface  
Setup

Advanced  
Setup

Access  
Management

Maintenance

Status

Help

DSL Router is ideal for home networking and small business networking. 'Quick Start' wizard will guide you to configure the ADSL router to connect to ISP (Internet Service Provider). The router's easy Quick Start will allow you to get Internet access within minutes. Please follow the 'Quick Start' wizard step by step to configure the ADSL Router.

الرئيسية

RUN WIZARD

Interface

Quick Start

Interface Setup

Advanced Setup

Access Management

Maintenance

Status

Help

Internet

LAN

Wireless

ATM VC

Virtual Circuit: **pvc4**

Status:  Activated  Deactivated

VPI: **8** (range: 0~255) هنا ضع قيمة 8

VCI: **35** (range: 1~65535) هنا ضع قيمة 35

QoS

ATM QoS: **UBR**

PCR: **0** cells/second

SCR: **0** cells/second

MBS: **0** cells

Encapsulation

ISP:  Dynamic IP Address

Static IP Address

PPPoA/PPPoE

Bridge Mode

انزل للأسفل

PPPoE/PPPoA

Username: **username@runnet.sy**

- ISP :  Dynamic IP Address  
 Static IP Address  
 PPPoA/PPPoE  
 Bridge Mode

## PPPoE/PPPoA

Username :

Password :

Encapsulation :  عليك اختيار هنا PPPoE LLC

## Connection Setting

- Connection :  Always On (Recommended)  
 Connect On-Demand (Close if idle for  minutes)  
 Connect Manually

TCP MSS Option : TCP MSS(0:default)  bytes

## IP Address

Get IP Address :  Static  Dynamic

Static IP Address :

IP Subnet Mask :

Gateway :

NAT :  عليك اختيار Disabled

Default Route :  Yes  No

TCP MTU Option : TCP MTU(0:default)  bytes عليك وضع القيمة 1492

Dynamic Route :  Direction

Multicast :

الرئيسية

SAVE

Status

اتقر هنا  
Quick  
Start

Interface  
Setup

Advanced  
Setup

Access  
Management

Maintenance

Status

Help

Device Info

System Log

Statistics

Device Information

Firmware Version : 2.9.5.0(RUE.C2)3.5.18.9  
MAC Address : 00:11:00:11:00:aa

LAN

IP Address : 192.168.2.1  
Subnet Mask : 255.255.255.0  
DHCP Server : Disabled

WAN

Virtual Circuit : PVC0  
Status : Not Connected  
Connection Type : PPPoE  
IP Address : 0.0.0.0  
Subnet Mask : 255.255.255.0  
Default Gateway : 0.0.0.0  
DNS Server : 82.137.208.1  
NAT : Disable

ADSL

ADSL Firmware Version : FwVer:3.5.18.9\_A\_TC3085 HwVer:T14.F7\_3.0  
Line State : up  
Modulation : Multi-Mode  
Annex Mode : ANNEX\_A

	Downstream	Upstream	
SNR Margin :	N/A	N/A	db
Line Attenuation :	N/A	N/A	db
Data Rate :	0	0	kbps

الرئيسية