

Status

Quick Start

Setup

Advanced

Service

Firewall

Maintenance

› Quick Start

› Quick Start

This Modem Router is ideal for home networking and small business networking. The 'Quick Start' wizard will guide you to configure the Modem router to connect to your ISP (Internet Service Provider).

START

EXIT

NEXT

Status

Quick Start

Setup

Advanced

Service

Firewall

Maintenance

▶ Quick Start

▶ Quick Start

Quick Start

The Wizard will guide you through these four quick steps. Begin by clicking on NEXT

Step 1. PVC Auto Searching

Step 2. Set your Internet connection

Step 3. Wireless network configuration

Step 4. Save settings of this ADSL Router

NEXT

NEXT

EXIT

Quick Start--DSL Setting

➤ Quick Start

➤ Quick Start

Enable PVC Auto Search:

PVC Auto Search Result:

VPI: (0~255)

VCI: (32~65535)

NEXT

BACK

NEXT

EXIT

Status

Quick Start

Setup

Advanced

Service

Firewall

Maintenance

Quick Start

Quick Start

Quick Start---ISP Connection Type

Select the Internet connection type to connect to your ISP. Click **NEXT** to continue

- | | |
|--|--|
| <input type="radio"/> Dynamic IP Address | Choose this option to obtain a IP address automatically from your ISP. |
| <input type="radio"/> Static IP Address | Choose this option to set static IP information provided to you by your ISP. |
| <input checked="" type="radio"/> PPPoE/PPPoA | Choose this option if your ISP uses PPPoE/PPPoA. (For most DSL users) |
| <input type="radio"/> Bridge Mode | Choose this option if your ISP uses Bridge Mode. |

BACK

NEXT

EXIT

NEXT

Status

Quick Start

Setup

Advanced

Service

Firewall

Maintenance

Quick Start

Quick Start

Quick Start---PPPoE/PPPoA

Enter the PPPoE/PPPoA information provided to you by your ISP. Click NEXT to continue

Username:

Password:

Connection Type :

BACK

NEXT

EXIT

NEXT

Status

Quick Start

Setup

Advanced

Service

Firewall

Maintenance

Quick Start---Wireless Setting

Quick Start

Quick Start

You may enable/disable Wireless, change the Wireless SSID and Authentication type in this page.
Click NEXT to continue.

Access Point:

 Activated Deactivated

SSID:

aya004

Broadcast SSID:

 Yes No

Authentication Type :

WPA-PSK/WPA2-PSK ▾

Password:

332532

(Please enter ASCII characters between 8 and 63 or
Hexadecimal characters between 8 and 64.)

BACK

NEXT

EXIT

الرئيسية

WAN IP Settings:

Type:

Fixed IP

DHCP

Local IP Address:

Remote IP Address:

NetMask:

Default Route:

Disable

Enable

Auto

Unnumbered:

NEXT

Connect

Disconnect

Add


Modify

Delete

Undo

Refresh

WAN Interfaces Table:

Select	Inf	Mode	VPI	VCI	Encap	NAPT	IGMP	DRoute	IP Addr	Remote IP	NetMask	User Name	Status	Edit
<input checked="" type="radio"/>	pppoe1	PPPoE	8	35	LLC	On	Off	On	0.0.0.0	0.0.0.0	255.255.255.255	d9d030@carrytel.ca	down	

Protocol:	PPPoE
Login Name:	<input type="text"/>
Password:	<input type="password" value="•••••"/>
Authentication Method:	AUTO ▾
Connection Type:	Continuous ▾
Idle Time (s):	<input type="text" value="0"/>
AC-Name:	<input type="text"/>
Service-Name:	<input type="text"/>

802.1q:	<input type="radio"/> Disable <input checked="" type="radio"/> Enable
VLAN ID(1-4095):	<input type="text" value="35"/>
MTU (1-1500):	<input type="text" value="1452"/>
Static:	<input type="text"/>
Source Mac address:	<input type="text" value="04:8D:38:D1:DB:22"/> (ex:00:E0:86:71:05:02) <input type="button" value="MACCLONE"/>

الرئيسية

Device_info

Device_info

ADSL

Statistics

ADSL Configuration

This page shows the setting of the ADSL Router.

Adsl Line Status	ACTIVATING.
------------------	-------------

Adsl Mode	--
-----------	----

Up Stream	--
-----------	----

Down Stream	--
-------------	----

Attenuation Down Stream	--
-------------------------	----

Attenuation Up Stream	--
-----------------------	----

SNR Margin Down Stream	--
------------------------	----

SNR Margin Up Stream	--
----------------------	----

Vendor ID	RETK
-----------	------

Firmware Version	4925ca26
------------------	----------

CRC Errors	--
------------	----

[الرئيسية](#)

Status

Quick Start

Setup

Advanced

Service

Firewall

Maintenance

WAN

WAN

Auto PVC

ATM

ADSL

LAN

WLAN

WAN Configuration

This page is used to configure the parameters for the WAN interface of your ADSL and(or) Ethernet Modem/Router. Note : When connect type of PPPoE and PPPoA only is "Manual", the "Connect" and "Disconnect" button will be enable.

WAN Physical Type:

 ADSL WAN Ethernet WAN

Default Route Selection:

 Auto Specified

VPI:

VCI:

Encapsulation:

 LLC VC-Mux

Channel Mode:

Enable NAPT:

Enable IGMP:

NEXT

PPP Settings:

User Name:

Password:

Basic

- Advanced
- Status
- Quick Start**
- WAN
- WLAN

Status

Device Information

Model Name	Billion 400G
System Up-Time	00:05:26s
Hardware Version	Solos400G
Software Version	5.53.s3.d3.rc5.069

Port Status

Ethernet	✓
ADSL	✓
Wireless ▶	✓

WAN

Port	Protocol	VPI/VCI	Connection	IP Address	Subnet Mask	Default Gateway	Primary DNS
ADSL	PPPoE	8 /35	Connection established <input type="button" value="Disconnect"/>	165.145.173.11	255.255.255.255	0.0.0.0 (Interface: igwan)	196.43.42.190

الاعدادات

Quick Start

WAN Port (WAN > Wireless)

ADSL Line Is Ready.

Auto scan

Auto **Manually**

SNR DATARATE

الرئيسية