



<b>DSL-2740U</b>	<b>SETUP</b>	<b>ADVANCED</b>	<b>MAINTENANCE</b>	<b>STATUS</b>	<b>HELP</b>
Wizard	<b>SETTING UP YOUR INTERNET</b>				<b>Helpful Hints...</b> First time users are recommended to run the <b>Setup Wizard</b> . Click the <b>Setup Wizard</b> button and you will be guided step by step through the process of setting up your ADSL connection.  If you consider yourself an advanced user or have configured a router before, click <b>Setup-&gt;Internet Setup</b> to input all the settings manually.  <a href="#">More...</a>
Local Network	There are two ways to set up your Internet connection. You can use the Web-based Internet Wizard or you can manually configure the connection.  If you have your ISP's connection settings first if you choose manual setup.				
<b>Internet Setup</b>	<b>Channel Config</b>	<b>CONNECTION WIZARD</b>			
Wireless Setup	ATM Settings	Click the <b>Setup Wizard</b> button for assistance and quick connection of your new D-Link Router to the Internet. You will be presented with step-by-step instructions in order to get your Internet connection up and running. Click the button below to begin.  <div style="text-align: center;"> <input type="button" value="Setup Wizard"/> </div> <p><b>Note:</b> Before launching the wizard, please ensure you have correctly followed the steps outlined in the Quick Installation Guide included with the router.</p>			
Time and Date	ADSL Settings				
	PVC Auto Search				
<b>BROADBAND</b>					

<b>DSL-2740U</b>	<b>SETUP</b>	<b>ADVANCED</b>	<b>MAINTENANCE</b>	<b>STATUS</b>	<b>HELP</b>
Wizard	<b>CHANNEL CONFIGURATION</b>				<b>Helpful Hints...</b> When configuring the router to access the Internet, be sure to choose the correct <b>Channel Mode</b> from the list below.  Please take care when entering your <b>username</b> and <b>password</b> as these are case sensitive. The majority of connection issues are caused by incorrect <b>username</b> or <b>password</b> combinations.  Note: Be sure to restart the router for the new Internet Setting to take effect.  <a href="#">More...</a>
Local Network	This page is used to configure the parameters for the channel operation modes of your ADSL Modem/Router. Note : When connect type of PPPoE and PPPoA only is "Manual", the "Connect" and "Disconnect" button will be enable.				
Internet Setup	<b>WAN PHYSICAL TYPE</b>				
Wireless Setup	WAN Physical Type: <input checked="" type="radio"/> ADSL WAN <input type="radio"/> Ethernet WAN				
Time and Date	<b>DEFAULT ROUTE SELECTION</b>				
	Default Route Selection: <input type="radio"/> Auto <input checked="" type="radio"/> Specified				
	<b>CHANNEL CONFIGURATION</b>				
	VPI: <input type="text" value="0"/>	VCI: <input type="text" value="32"/>	Encapsulation: <input checked="" type="radio"/> LLC <input type="radio"/> VC-Mux		
	Channel Mode: <input type="text" value="PPPoE"/>		Enable NAPT: <input checked="" type="checkbox"/>	Enable IGMP: <input checked="" type="checkbox"/>	
	802.1q: <input checked="" type="radio"/> Disable <input type="radio"/> Enable		VLAN ID(1-4095): <input type="text" value="0"/>		
	IP Protocol: <input type="text" value="Ipv4"/>				
	PPP Settings: User Name: <input type="text" value="username@aya.ipv.sy"/>		Password: <input type="text" value="password"/>		

802.1q:  Disable  Enable

VLAN ID(1-4095):

IP Protocol:

PPP Settings: User Name:  Password:

Type:  Idle Time (min):

WAN IP Settings: Type:  Fixed IP  DHCP

Local IP Address:  Remote IP Address:

Netmask:

Default Route:  Disable  Enable  Auto

Unnumbered



### CURRENT ATM VC TABLE:

Type:  Idle Time (min):

WAN IP Settings: Type:  Fixed IP  DHCP

Local IP Address:  Remote IP Address:

Netmask:

Default Route:  Disable  Enable  Auto

Unnumbered



### CURRENT ATM VC TABLE:

Select	Inf	Mode	VPI	VCI	Encap	NAPT	IGMP	DRoute	IP Address	Remote IP	Net Mask	User Name	Status	Edit
<input type="radio"/>	pppoe2	PPPoE	8	35	LLC	On	Off	On	90.153.14.232	10.10.10.5	255.252.55.255	alsultan@aya.sy	Up	
<input type="radio"/>	pppoe1	PPPoE	0	32	LLC	On	On	Off	0.0.0.0	0.0.0.0	255.252.55.255	ayatv</b>	Down	



Wizard

Local Network

Internet Setup

Wireless Setup

Time and Date

## PPP INTERFACE - MODIFY

This page is used for advanced PPP interface configuration.

## PPP INTERFACE

Protocol: PPPoE

ATM VCC: 0/32

Login Name: Password: Authentication Method: Connection Type: Idle Time (s): Bridge:  Bridged Ethernet (Transparent Bridging) Bridged PPPoE (implies Bridged Ethernet) Disable BridgeAC-Name: Service-Name: 802.1q:  Disable  EnableVLAN ID(1-4095): MTU (1-1500): Static IP: Source Mac address:  (ex:00:E0:86:71:05:02)



مزود خدمة الإنترنت

DSL-2740U // SETUP **ADVANCED** MAINTENANCE STATUS HELP

Advanced Wireless  
Access Control List  
Port Triggering  
Port Forwarding  
DMZ  
Parent Control  
Filtering Options  
DOS Settings  
DNS  
Dynamic DNS  
Network Tools  
**Routing**  
NAT  
RIP

**Static Route**  
IPv6 Static Route  
RIP

**WIRELESS ADVANCED SETTINGS**

These settings are only for more technically advanced users who have a sufficient knowledge about wireless LAN. These settings should not be changed unless you know what effect the changes will have on your Access Point.

**ADVANCED WIRELESS SETTINGS**

Authentication Type:  Open System  Shared Key  Auto  
 Fragment Threshold:  (256-2346)  
 RTS Threshold:  (0-2347)  
 Beacon Interval:  (20-1024 ms)  
 DTIM Interval:  (1-255)  
 Data Rate:    
 Preamble Type:  Long Preamble  Short Preamble  
 Broadcast SSID:  Enabled  Disabled  
 Relay Blocking:  Enabled  Disabled  
 Internet to Wireless Blocking:  Enabled  Disabled  
 Wifi Multicast to Unicast:  Enabled  Disabled  
 Aggregation:  Enabled  Disabled  
 Short GI:  Enabled  Disabled

Apply Changes

Helpful Hints...  
By default these options need not be changed for this router to operate with Wireless.  
More...

**BROADBAND**



مزود خدمة الإنترنت

DSL-2740U // SETUP ADVANCED **ROUTING CONFIGURATION** MAINTENANCE STATUS HELP

Advanced Wireless  
Access Control List  
Port Triggering  
Port Forwarding  
DMZ  
Parent Control  
Filtering Options  
DOS Settings  
DNS  
Dynamic DNS  
Network Tools  
Routing  
NAT

**ROUTING CONFIGURATION**

This page is used to configure the routing information. Here you can add/delete IP routes.

**HOST**

Enable   
 Destination   
 Subnet Mask   
 Next Hop   
 Metric   
 Interface

Add Route Update Delete Selected Show Routes

**STATIC ROUTE TABLE**

Select	State	Destination	Subnet Mask	NextHop	Metric	Itf
--------	-------	-------------	-------------	---------	--------	-----

Helpful Hints...  
You can click [Show Routes](#) to show Current IP Routing Table.  
More...

**D-Link**

مزود خدمة الإنترنت

DSL-2740U

SETUP

ADVANCED

MAINTENANCE

STATUS

HELP

Advanced Wireless

Access Control List

Port Triggering

Port Forwarding

DMZ

Parent Control

Filtering Options

DOS Settings

DNS

Dynamic DNS

Network Tools

Routing

NAT

**ROUTING CONFIGURATION**

This page is used to configure the routing information. Here you can add/delete IP routes.

**HOST**Enable Destination Subnet Mask Next Hop Metric Interface 

Add Route

Update

Delete Selected

Show Routes

**STATIC ROUTE TABLE**

Select	State	Destination	Subnet Mask	NextHop	Metric	Itf
<input type="radio"/>	Enable	10.1.0.0	255.255.255.0	0.0.0.0	1	pppoe2

**Helpful Hints...**

You can click [Show Routes](#) to show Current IP Routing Table.

[More...](#)**BROADBAND**